



# PYRAMID

## 071915 Honda CB500X Hugger Fitting Instructions

Kit includes:

2X Rubber Strips	Pre-fitted CRUB0001
1X Circular Rubber Pad	Pre-fitted CBUM003
2X Square Rubber Foot	Pre-fitted CBUM0003
1X Nylon Zip-Tie 430mm X 7.6mm	CAB0430A

- Check all four rubber mountings are fitted to the Pyramid Hugger as highlighted in **GREY** in **Fig 1**.
- Feed the Zip-Tie through the slots in the Pyramid Hugger as highlighted in **RED** in **Fig 1**.
- Slide the Pyramid Hugger over the rear tyre and fit into place on the swingarm.
- The Zip-Tie should now be slotted down the groove on the front of the swingarm to meet with other end of the Zip-Tie - see **Fig 2** for guidance.
- Fit the Zip-Tie together and slowly tighten by hand checking the alignment of the Zip-Tie & Pyramid Hugger. Use a pair of pliers or grips for final tightening and trim the excess Zip-Tie away.

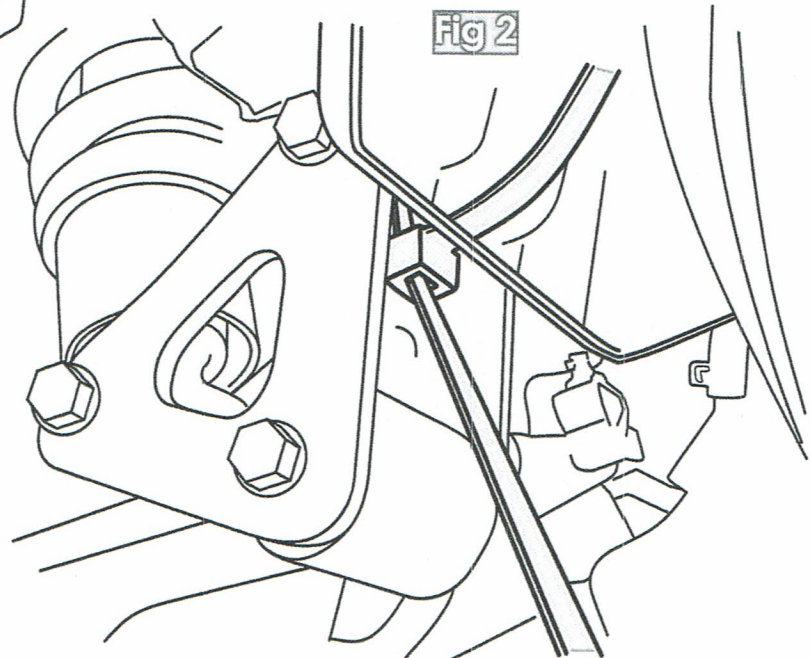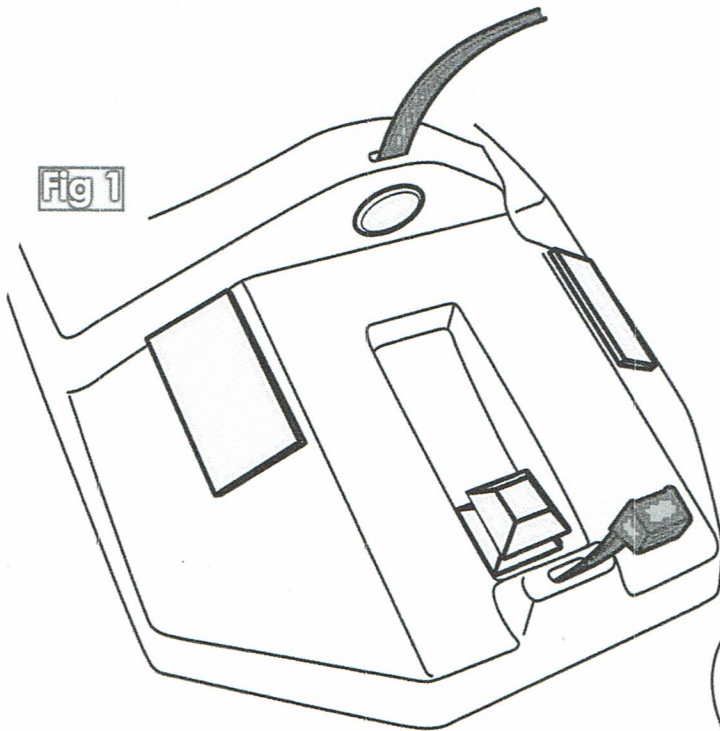

Got Questions?  
sales@pyramid-plastics.co.uk  
01427 677990  
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

