

## **KAWASAKI ZX6 Hugger** Fitting Instructions Part # 073015

1x GRP/Carbon Hugger 1x Mounting extension bracket – CFK073015 1x M5x12mm Button head Bolt – CB0L0110 1x M5 Nyloc Nut – CB0L0150 1x zip tie 530mm – CAB0530 1 x M5 plastic washer – CWAS0100


## 1.


Firstly remove the existing chain guard and retain the bolts. Unbolt the brake line retaining clip and position the mounting bracket as shown.

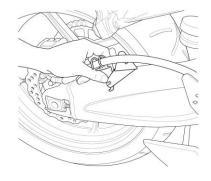


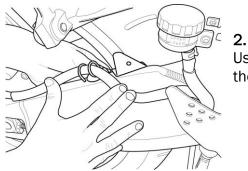

Using the original bolt, secure the mounting bracket **between** the brake line holder and the swinging arm.

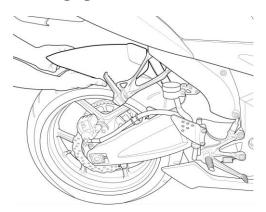




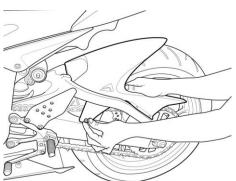

**4** Secure the hugger in place using the Three original fixing points and bolts removed in step **1**.

5. Secure the hugger to the mounting bracket using the M5 nut and bolt provided.



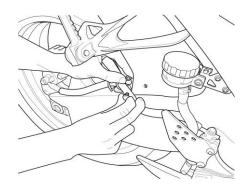

6.

Fix the lower protection arm away from the tyre using the zip tie provided.

Ensure to check that <u>ALL</u> bolts are securely fastened.