

076900 Triumph Tiger 900 Hugger Fitting Instructions

Kit Includes:

1X	Moulding	C076900
2X	M6 X 16mm Bolts	CBOL0251
1X	M6 X 20mm Bolt	CBOL2165
3X	Rubber Grommets	CGRO0013
2X	8mm Spacers	CGRO0016
1X	12mm Spacer	CGRO0018
1X	Circular Foam Pad (pre-fitted)	CFOA0005


- Remove the original chainguard.
- Fit the rubber grommets & spacers to the 3 mounting points in the Pyramid Hugger before attempting to fit to the bike. See diagram below for the position of each fixing.
- Temporarily remove the side mounting point (right-hand side) and slide the Hugger over the tyre from the rear. Reattach this side mounting point with the brake hose clip on top of the grommet & spacer. Finger tighten only.
- Now attach both mounting points on the chainguard side and tighten all mounting points fully.

Please check all fasteners periodically.

When riding either two up, off-road and/or on rough surfaces, we recommend the adjustment of the suspension settings to compensate for added weight.

The battery box can collide with the hugger when the stock suspension setting is excessively low.

Please refer to your owner's manual or consult Triumph for more information on these adjustments.

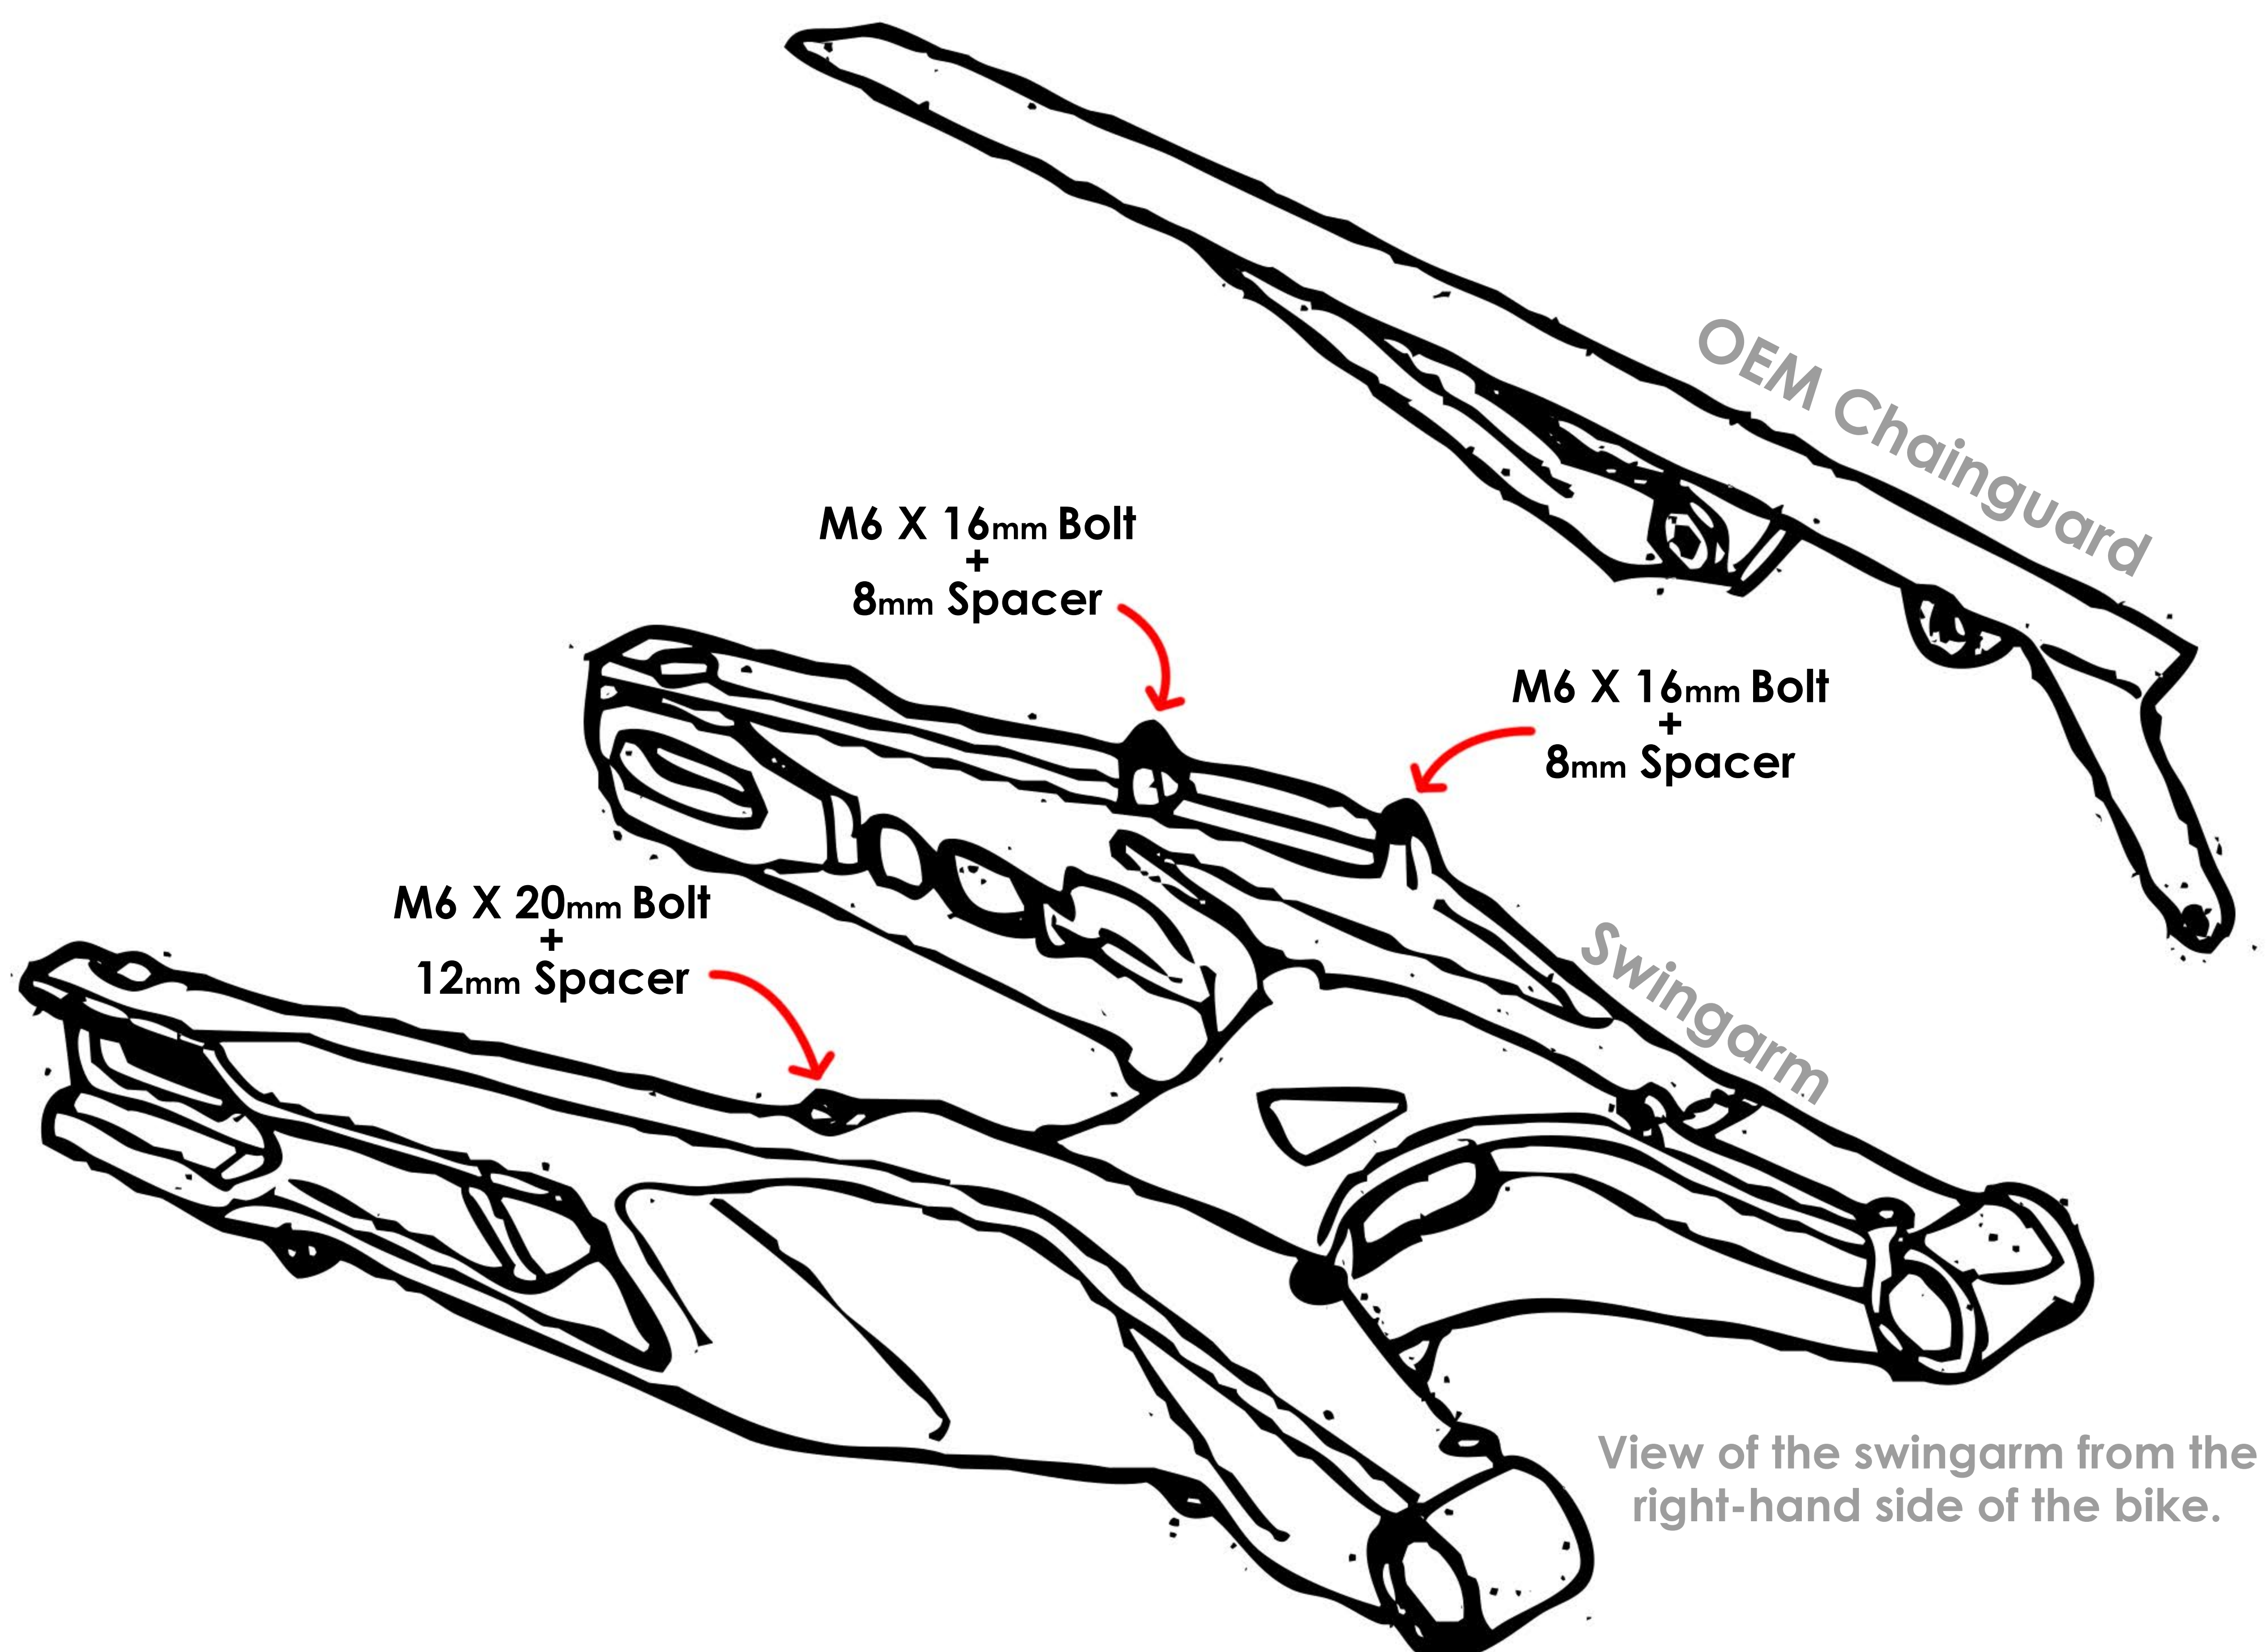

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!