

# PYRAMID


## 08024 Honda CRF1000L Africa Twin Wind Deflector Fitting Instructions

### Kit Includes:

● 2X M5 X 20mm Bolt	CBOL0115
▲ 2X M6 X 25mm Bolt	CBOL0220
■ 4X M6 Spacer	CSPA0009
◆ 2X M6 X 12mm Steel Collar	CGRO0018

- Remove the OEM bolts from the places shown below (see diagram).

Please note: the part will flex slightly when fully tightened at the forward mounting points - this isn't an issue and will not damaged the product.

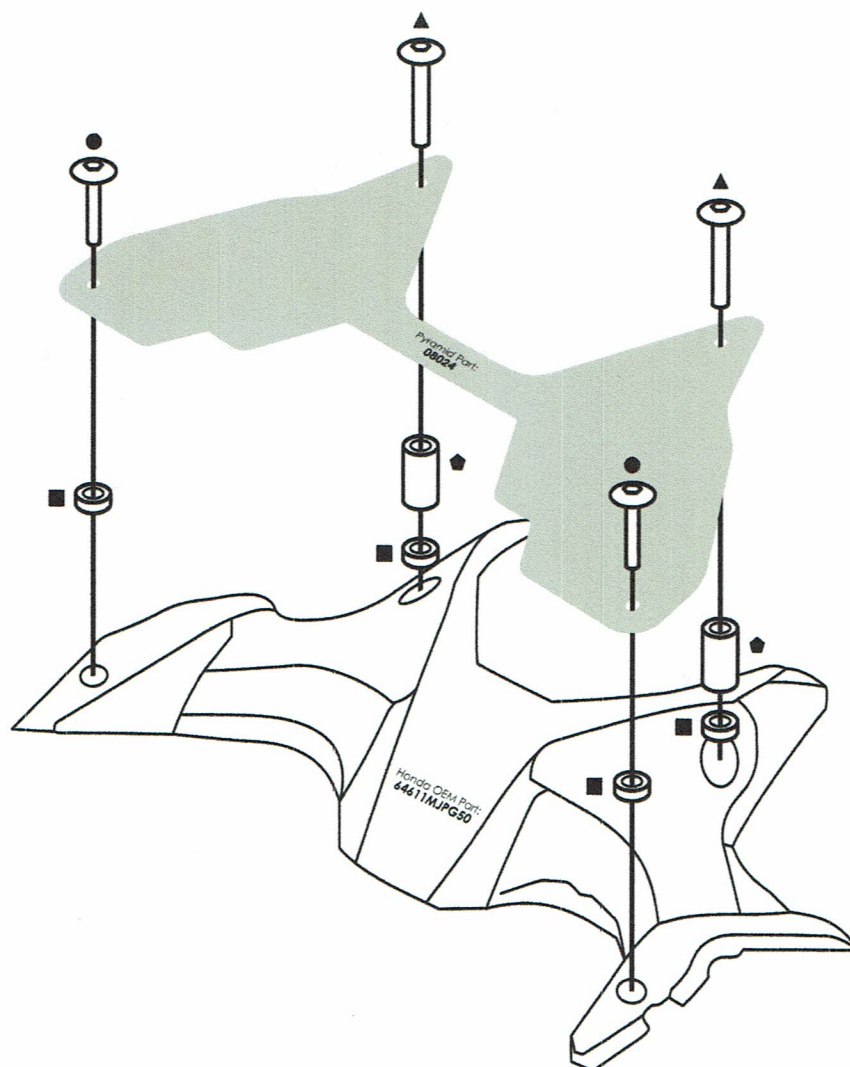

# Africa Twin

Contact us:  
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

