

PYRAMID



08600 Triumph Tiger 900 Wind Deflector Instructions


Kit Includes:

| | | |
|----|-----------------|----------|
| 1X | Wind Deflector | C08600 |
| 2X | M5 X 20mm Bolts | CBOL0116 |
| 4X | Large Washers | CWAS0230 |
| 2X | Small Washers | CWAS0221 |
| 2X | Spacers | CSPA0022 |
| 2X | Cable Ties | CAB0200 |

- Fig 1 shows how the Pyramid Wind Deflector fits using the components supplied.
- Fig 2 gives additional information for adjustment.

Check fixings periodically.

Fig 1

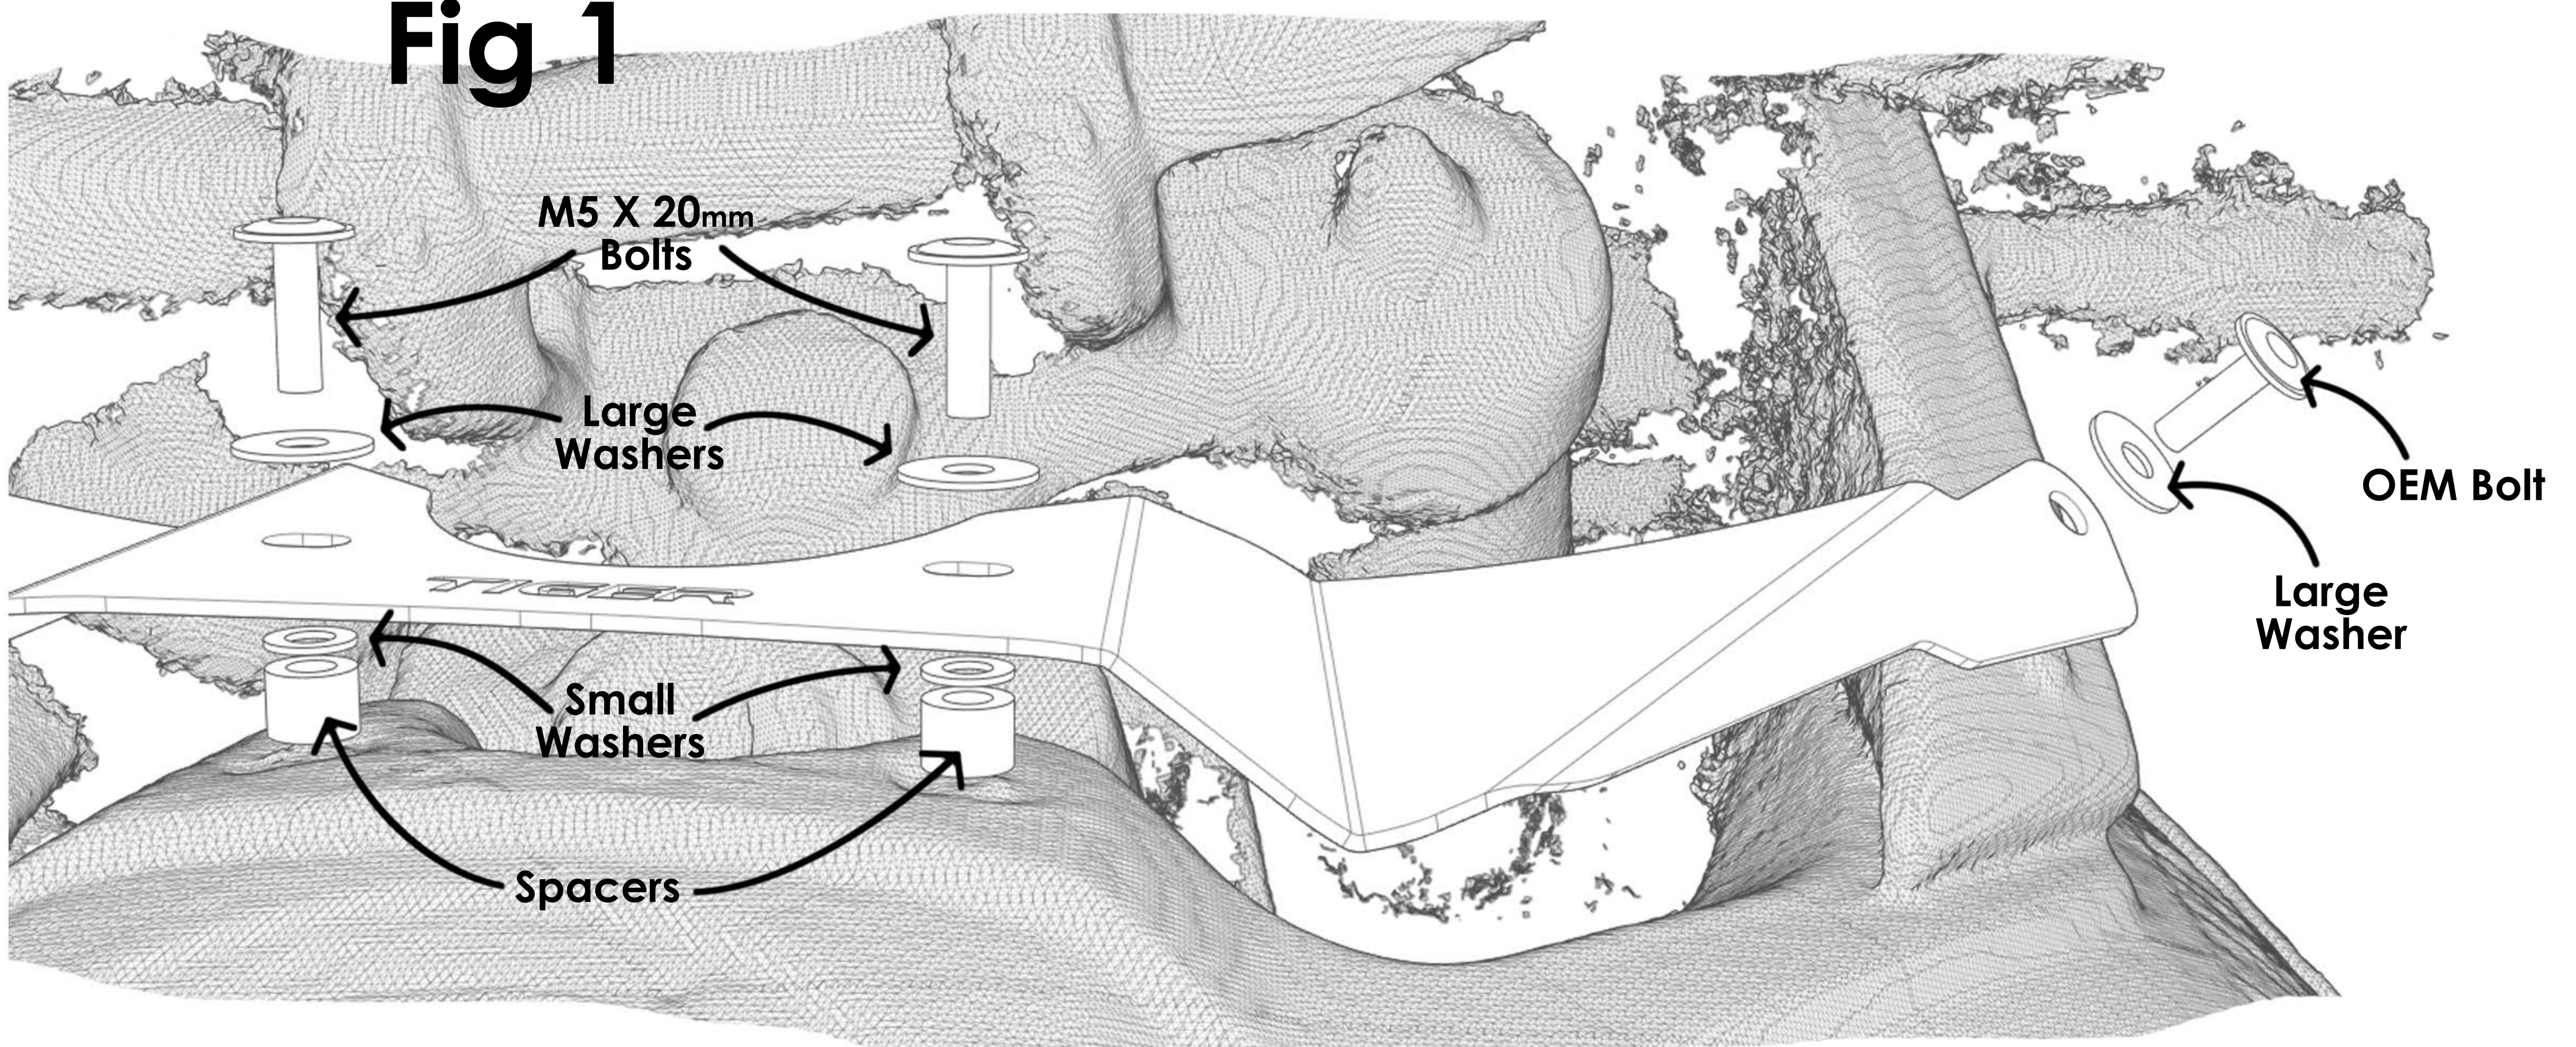


It will be necessary to loosen this bolt and rotate the brake line connector (AKA Banjo Bolt) away from the Pyramid Wind Deflector to avoid any contact at full lock.

If the brake lines contact in any other areas on the Pyramid Wind Deflector it is possible to reposition the OEM rubber ties.

The two small cable ties supplied can also be used to the same effect.

Fig 2

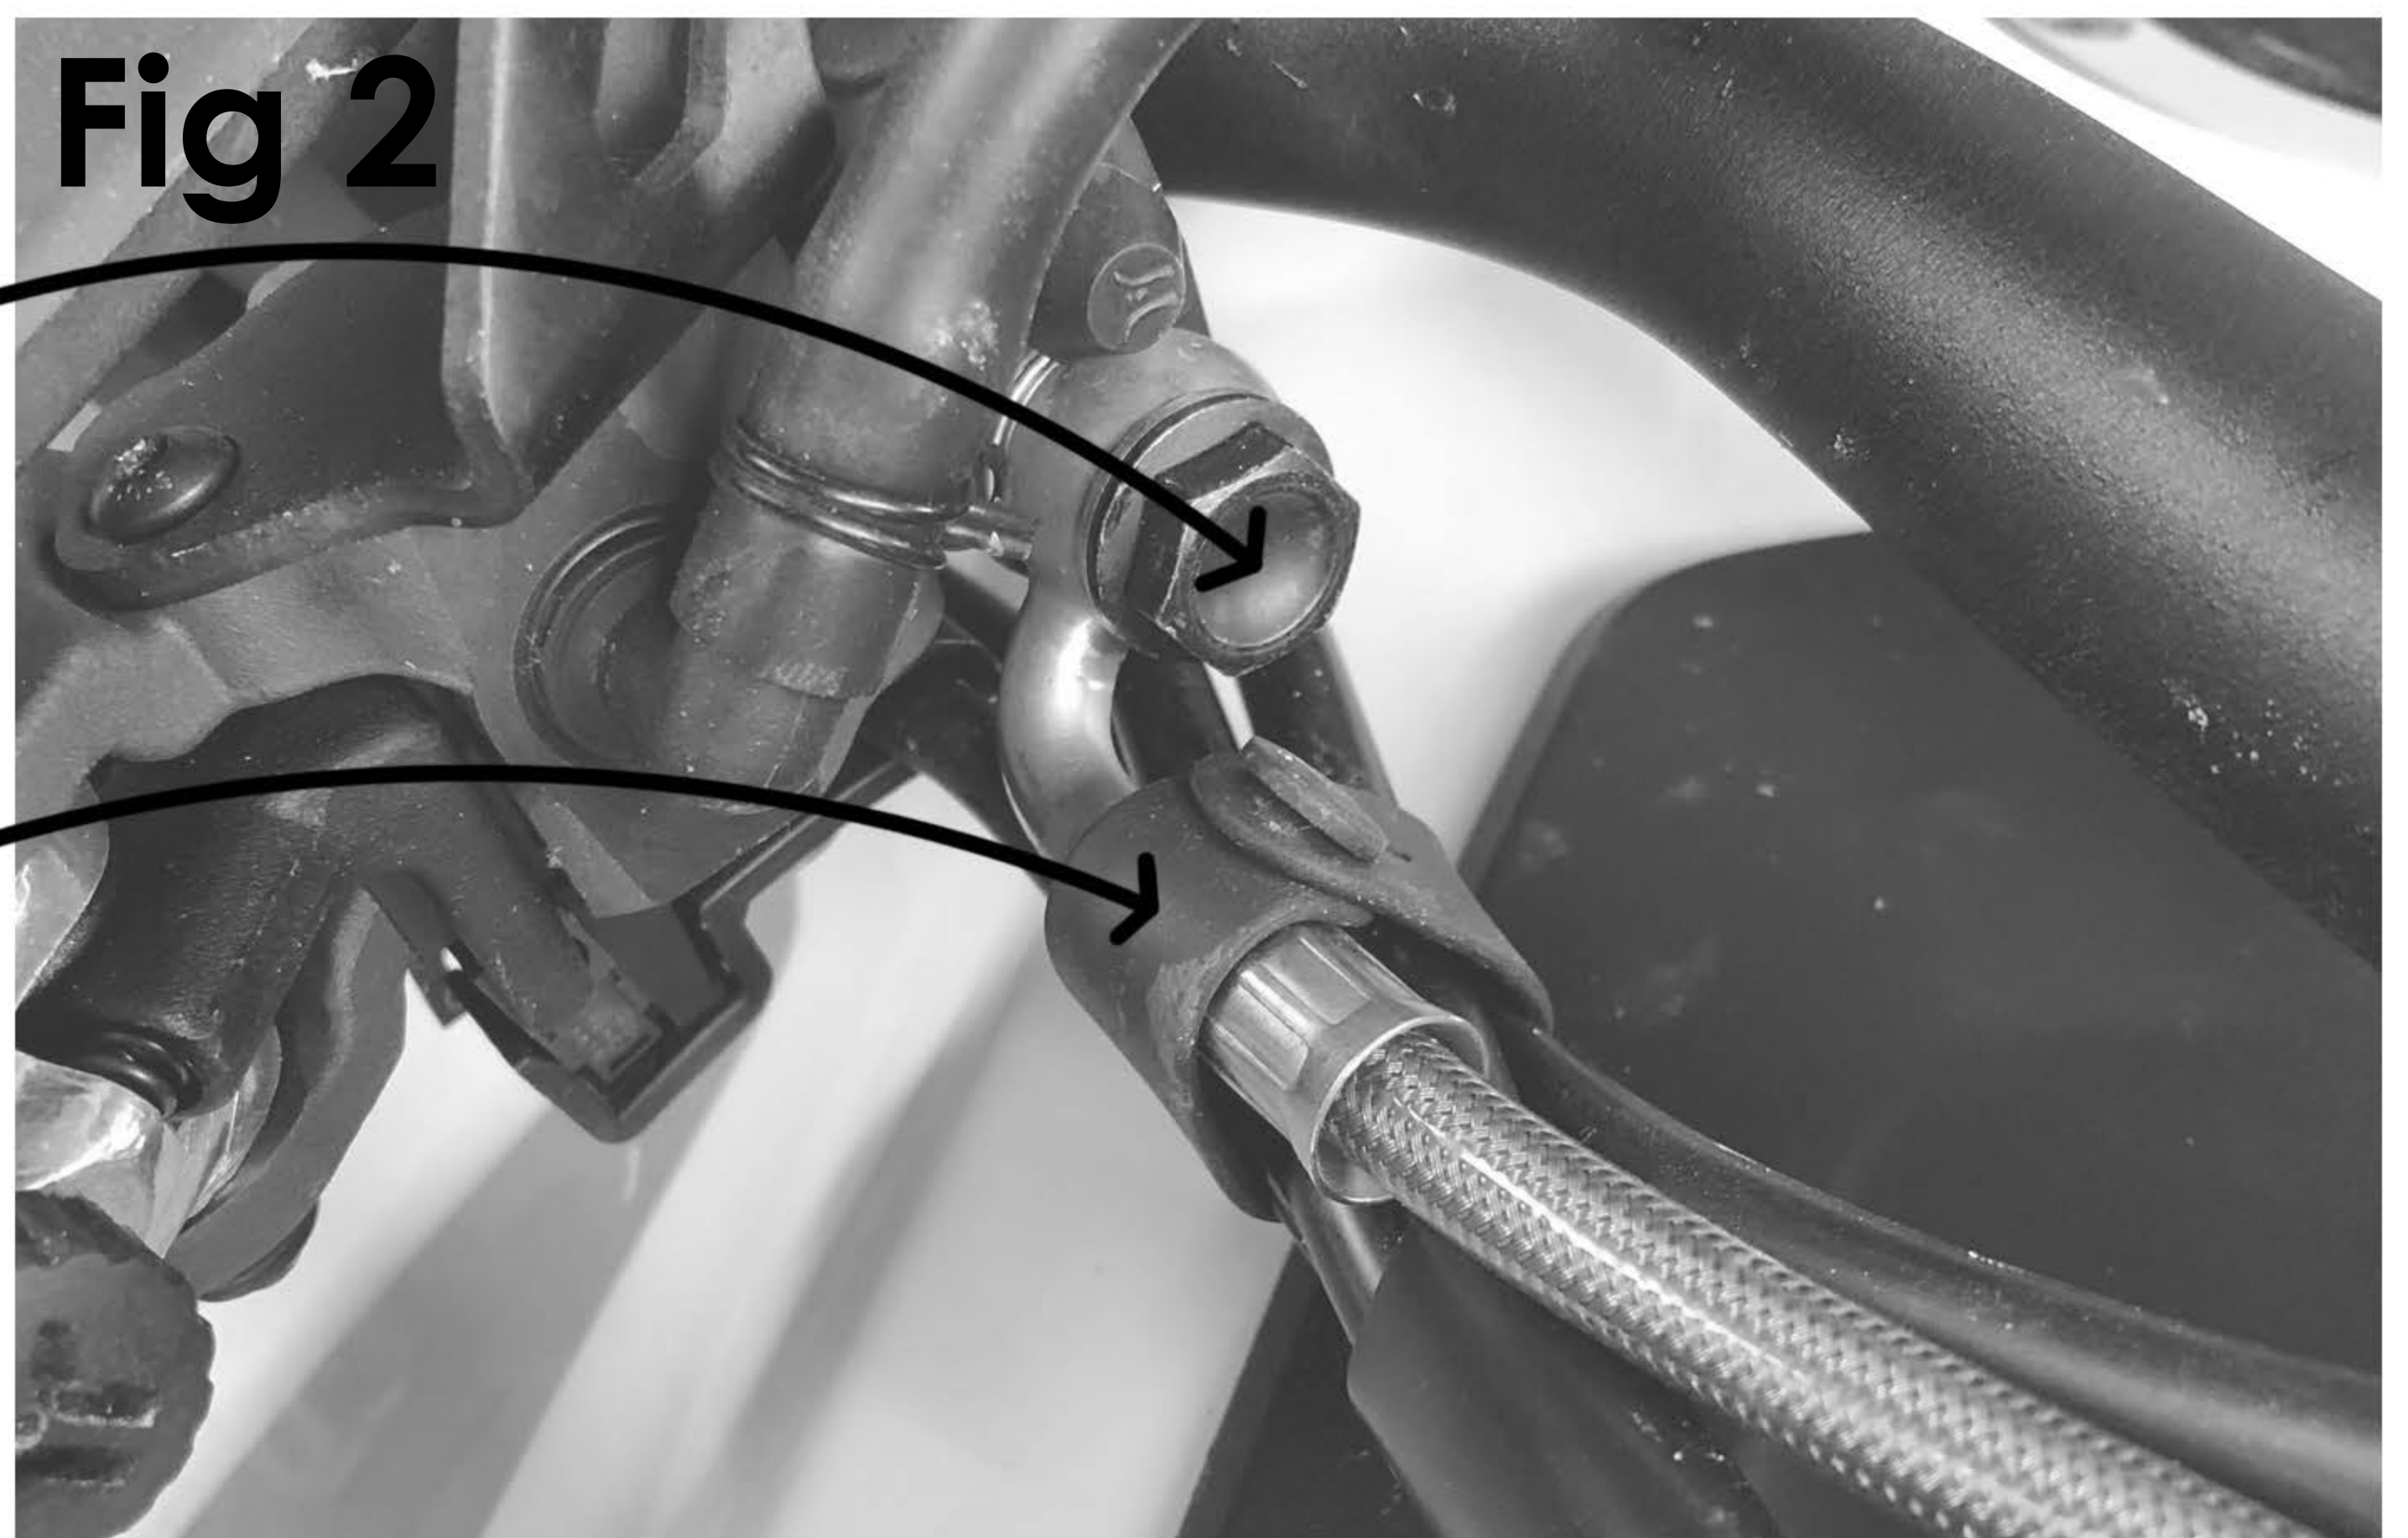

TIGER

sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

