PYRAMD/ **19990** KTM 1290 Super Duke R Seat Cowl Instructions

C19990

CTRX0001


CWAS0221

Kit Includes: Moulding **1X**

- **Black Torx Bolts 2X**
- **Black Washers 2X**
- **3M Velcro Tabs** (12mm X 12mm square approx) **2X** C09000
 - Remove the original rear seat with the key.
 - Use the two black Torx bolts & black washers supplied to loosely mount the cowl at the forward two mounting points. It is important to mount loosely as to gain access at the rear of the cowl.
 - Clip the 3M velcro tabs together and then remove the backing film. Stick the 3M velcro tabs on the inside of the seat unit as show below. Use photograph below for guidance.
 - Press the seat cowl down onto the 3M velcro tabs at the rear.

Check alignment of the cowl before pressing down. Once the cowl is held by the 3M velcro tabs tighten the forward two mounting points.

• Be sure to check fixings periodically.

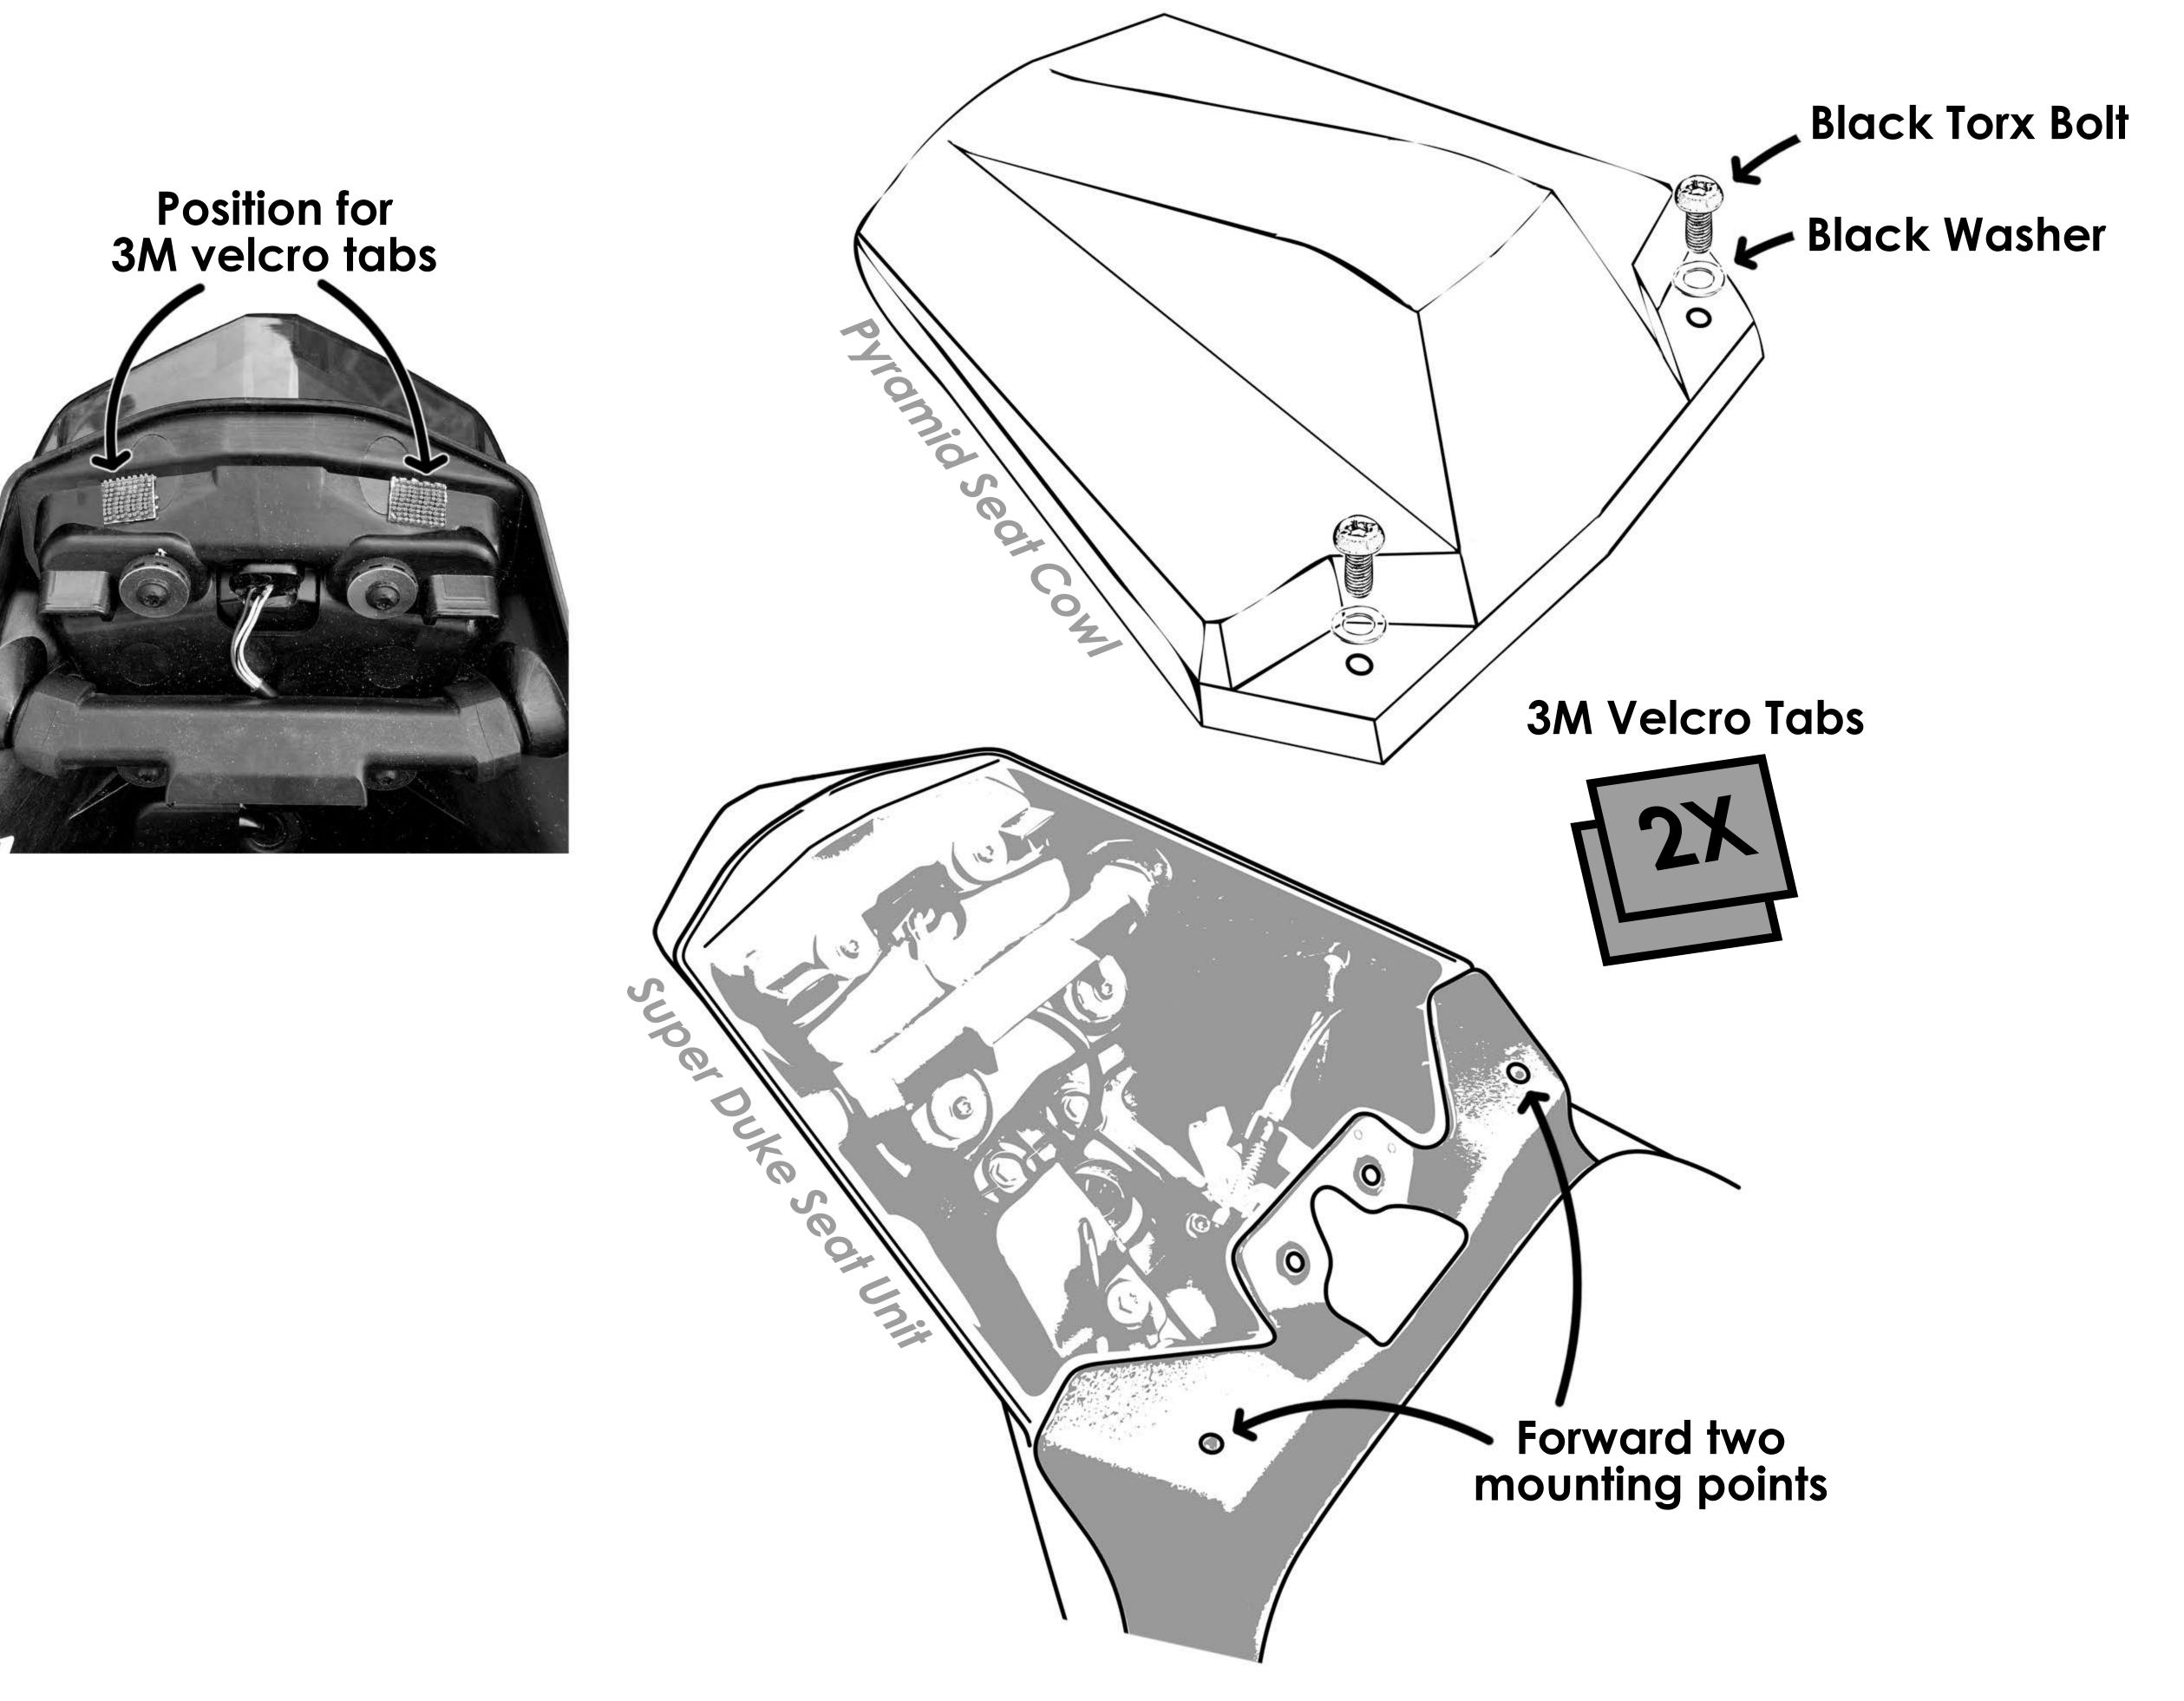

Got questions? sales@pyramid-plastics.co.uk +44 (0)1427 677990 www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

