

# BANDIT 1200 BELLYPAN

## Fitting kit Part # 207020

A) 2 x extended head bolt	CBOL0600
B) 1 x 25-40mm hose clip	CFIT0025
C) 1 x L/h bracket	CFK207020
D) 1 x R/h bracket	CFK207020
E) 4 x M6 x 20mm allen bolts	CBOL2165
F) 2 x M10 washers	CWAS0402
G) 4 x M6 plastic washers	CWAS0221
H) 1 x M6 shakeproof washers	CWAS0202
I) 1 x M6 nut	CNUT0201
J) 2 x 13mm grommet and spacer	CGRO0013/CGRO0017

## Fitting Instructions

**Note:** When fitting all brackets with the exception of 'A' they should be left finger tight until the panel has been correctly aligned.

Remove lower bolt on forward engine mounts, and replace with extended head bolts (A)  
There is a washer inside the frame that needs to come out so the bolt A will seat down fully.

Now fit the Lower bracket (C) on left side of existing engine mounting bolt. Fit 2 x 10mm flat washers (F) behind bracket 'C'


Now mount bracket 'D' to the frame using the hose clip (B) by opening it up to allow it to pass through the bracket (D) and around the frame tube.

NOTE: Using some tape wrap it round the frame to protect it from the hose clip.


Offer up the belly Pan and fix into place with the 2x M6x20mm bolts and M6 plastic washers on the forward mounting points.

On the left hand bottom mount use 1x M6x20 bolt 1x Shake proof washer and 1x M6 nut.  
On the right hand side use 1x M6x20mm bolt and 1x M6 black plastic washer.

**CHECK ALL FASTENERS FOR TIGHTNESS WHEN ASSEMBLY IS COMPLETE**

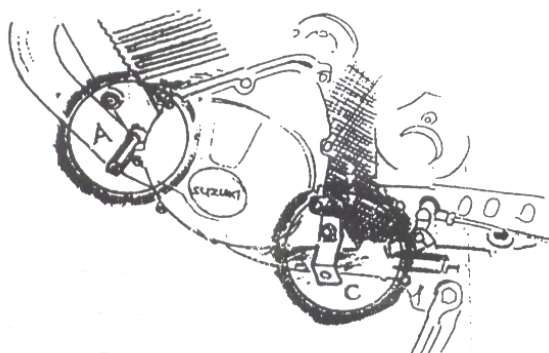

**LEFT SIDE**

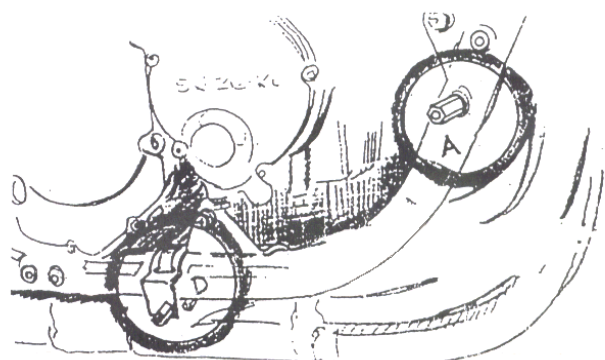

**RIGHT SIDE**