

30201 Yamaha Tenere 700 Handguard Extensions Fitting Instructions


Kit Includes:

1X	C30201	Mouldings (pair)
1X		Stick-Fit Kit + 4 Rivets + Alcohol Wipe

Clamps are required to fit this product

The Pyramid Tenere 700 Handguard Extensions are designed to be fitted mechanically at the bar end, using original fixings. The extensions should then be attached with our 'Stick-Fit' pads at the joining faces (highlighted in GREY in the diagrams below).

- Please clean the fitting faces thoroughly using the alcohol wipe provided. Once dry, apply the 'Stick-Fit' Pads in the areas highlighted in GREY in the diagram below. There is no need to use all of the Stick-Fit Pads we have provided.
- Now loosely bolt each Pyramid Handguard Extension to the bar end, as shown in the diagram below.
- Once the Pyramid Handguard Extension is in place, remove the backing paper from the 'Stick-Fit' Pads and carefully position each extension on the OEM Handguard at the joining faces (highlighted in GREY).
- Now clamp the two faces together and leave for a minimum period of 24 hours. It is particularly important to clamp the faces as evenly as possible. We recommend the use of 2 clamps for each side (4 clamps in total).
- Push-Rivets are also provided for customers who would prefer a completely mechanical fitment option. You should use a 4mm drill bit to drill holes in the two locations shown below - dotted circles mark our recommended mounting points. We always advise the use of masking tape when drilling these holes to ensure a clean cut.

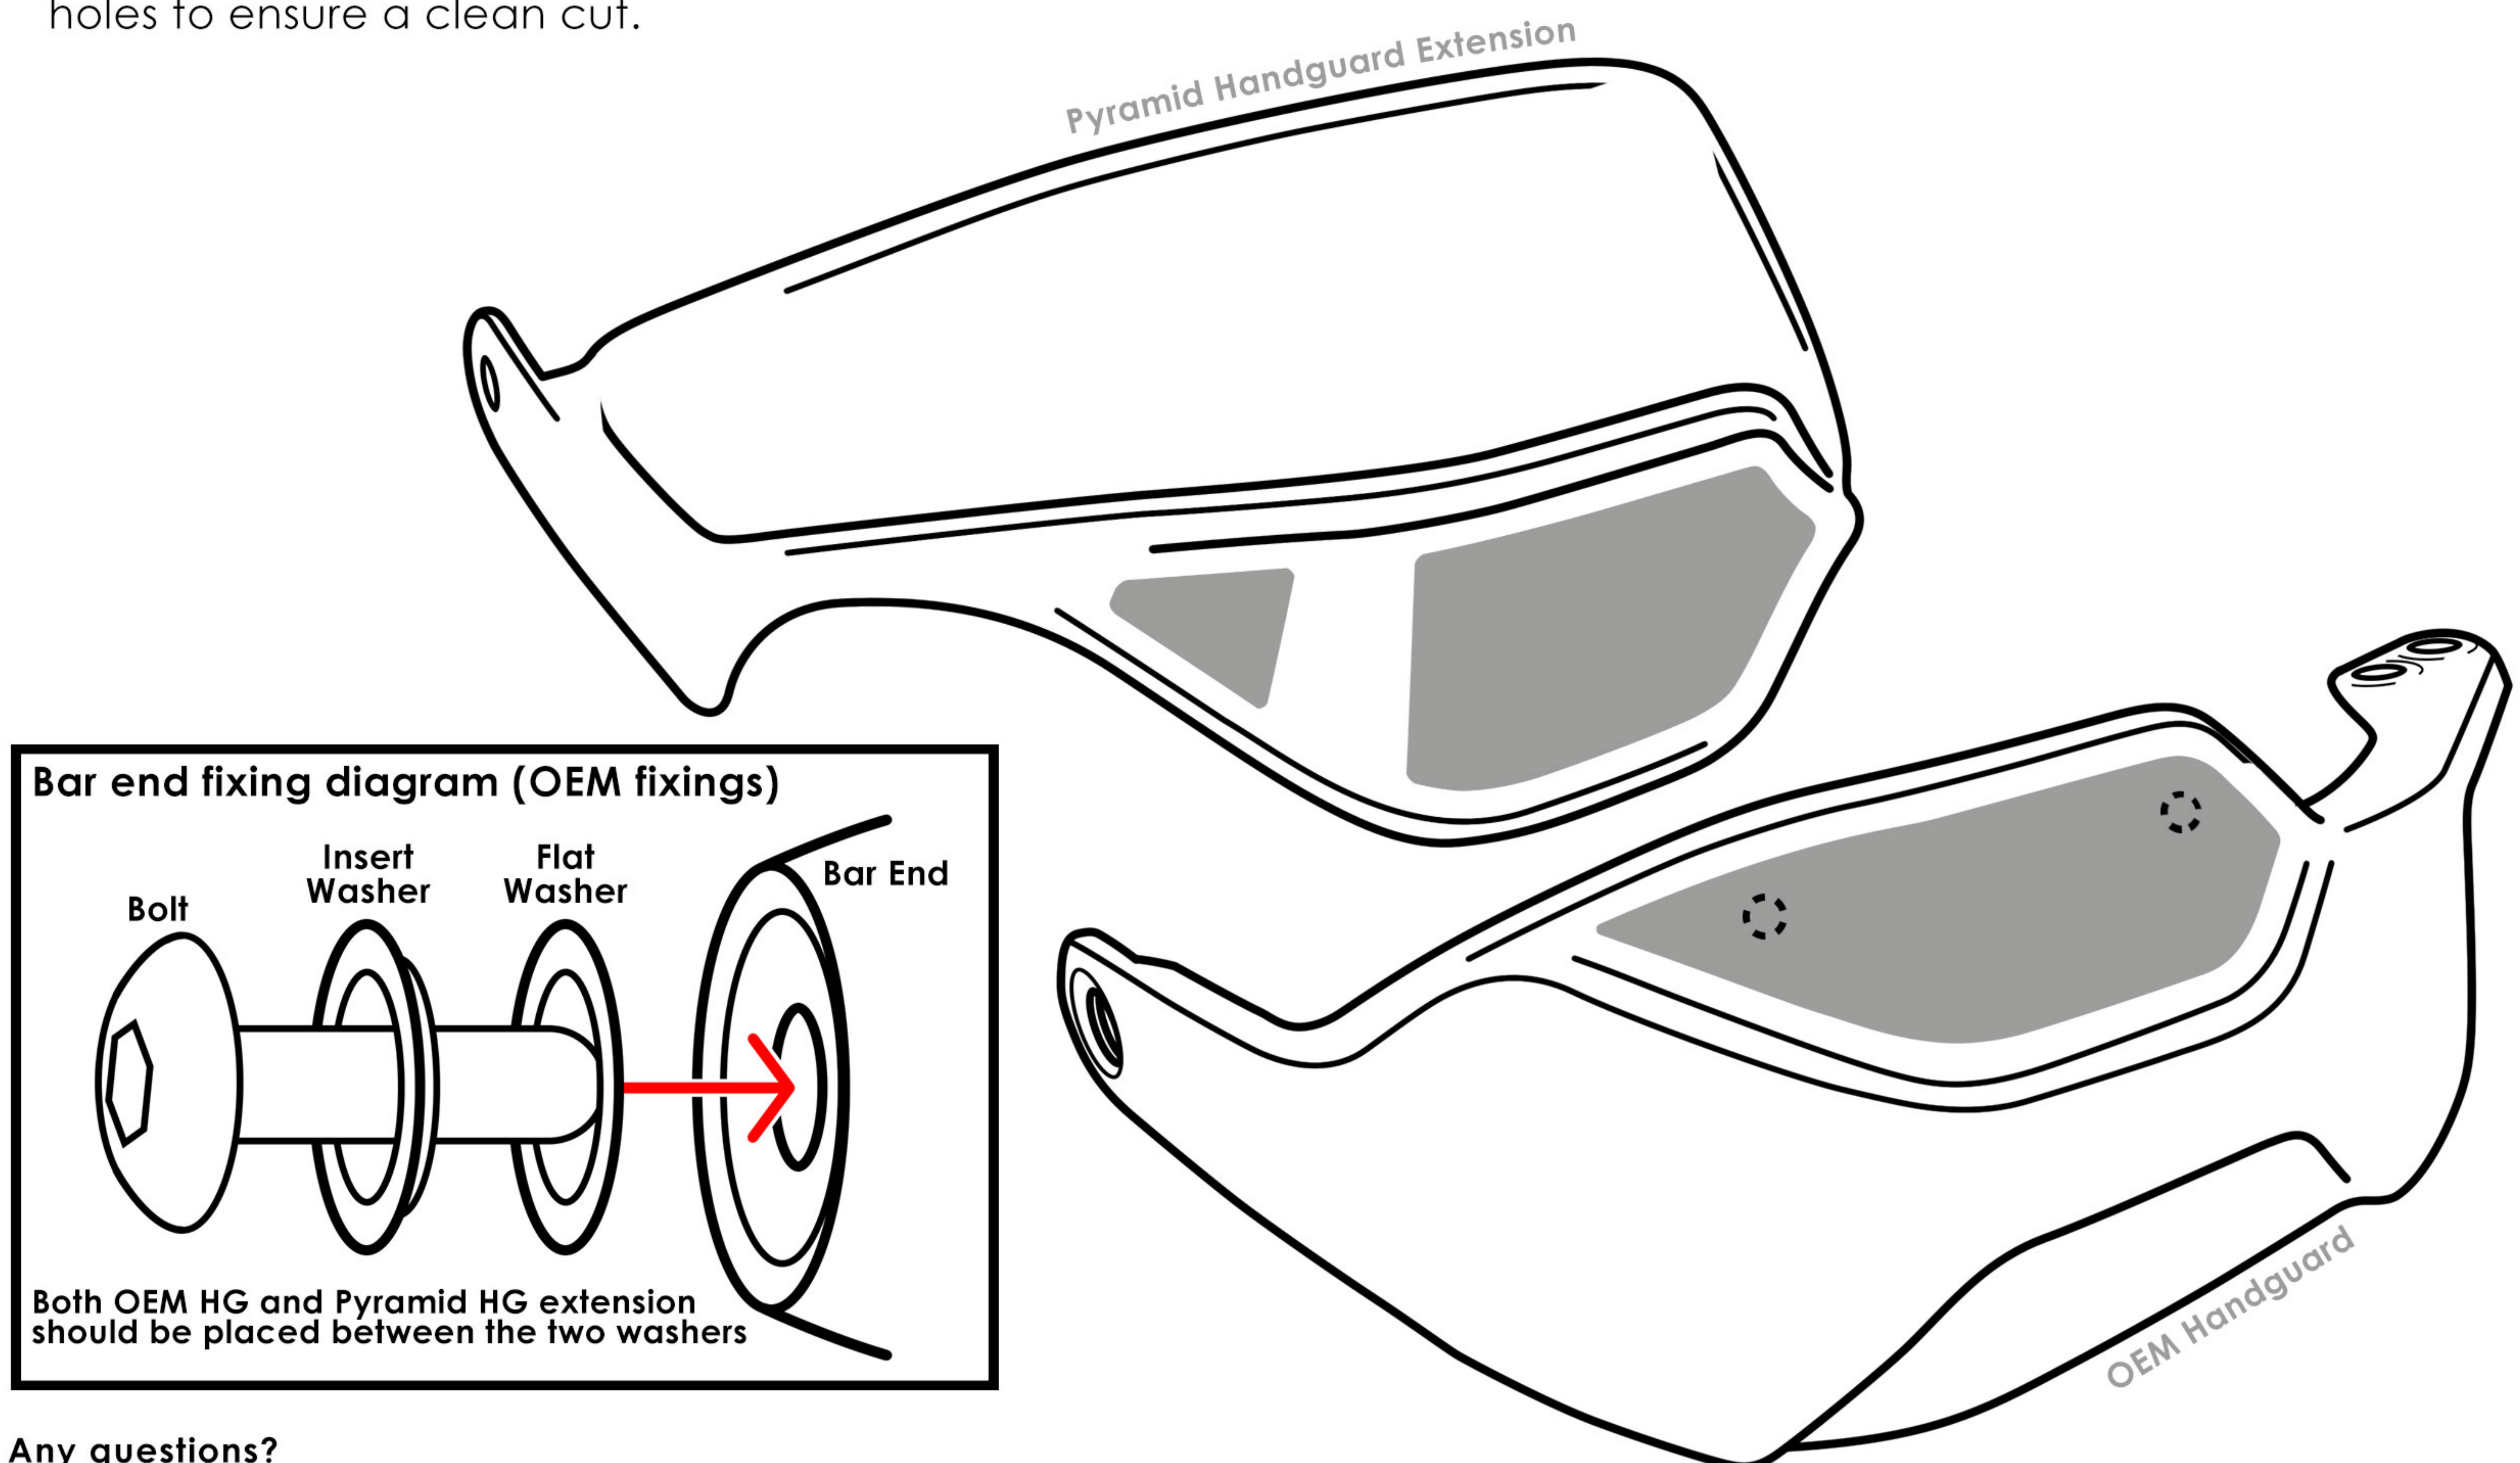

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

TENERE 700