

# **APRILIA FUTURA HUGGER**

## **PART # 077010**


### **Fitting kit:**

8 x 430mm x 4.8 cable ties	CAB0430
2 x M6 x 20mm button Allen bolt	CBOL2165
4 x M6 plastic washer	CWAS0221
2 x M6 Nyloc nut	CNUT0200

### **Fitting instructions:**

#### **N.B CABLE TIES**

Due to the shape of the mono arm cable ties are the best option to ensure secure mounting of the hugger. Because we have not been able to source cable ties that are long enough it is necessary to double them up. Please refer to the illustration. Four cable ties are supplied as spares. Insert the cable ties as illustrated.

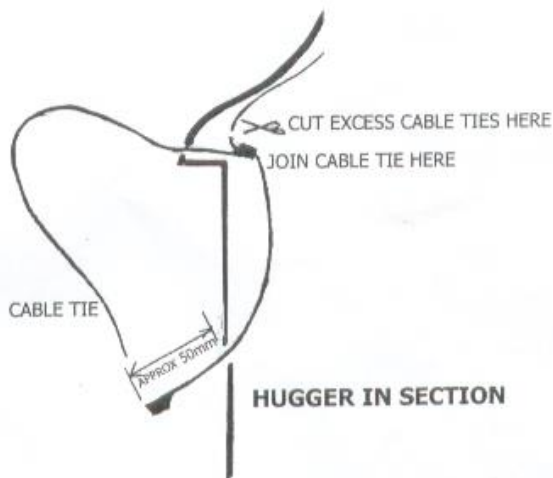

Position the hugger, carefully pass the cable ties through the swing arm unit hole. Fasten the cable ties without fully tightening at this stage.

The hugger is mounted over the chain guard via the cut out in the side of the guard. Use the bolts supplied with a plastic washer inside the chain guard and a plastic washer outside the hugger. Secure with the nyloc nuts supplied.

Check hugger alignment before finally tightening the bolts and cable ties.

**Please note: check hugger alignment and fasteners periodically.**